


## 1) LAYOUT DIAGRAM

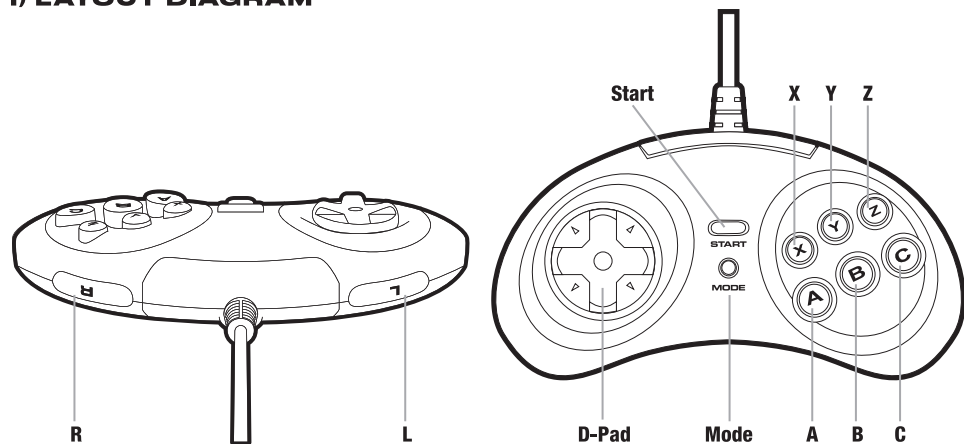

## 2) DEFAULT BUTTON MAPPING

Genesis	D-Input	X-Input	PS3®	Mac®	Switch
Up ↑	Up ↑	Y-Axis ↑	Up ↑	Y-	Up ↑
Right →	Right →	X-Axis →	Right →	X+	Right →
Down ↓	Down ↓	Y-Axis ↓	Down ↓	Y+	Down ↓
Left ←	Left ←	X-Axis ←	Left ←	X-	Left ←
A	2	A	●	3	A
B	3	B	×	2	B
X	1	X	▲	4	X
Y	4	Y	■	1	Y
C	5	RT	R2	8	ZR
Z	6	LT	L2	7	ZL
L	7	LB	L1	5	L
R	8	RB	R1	6	R
Mode	9	Select	Share/Select	9	-
Start	10	Start	Options/Start	10	+
Start +A	Guide	Guide	-	13	Home

Switch Macros	
Hold for 5 seconds	Mode Enabled
↑ + Start	D-Pad input
← + Start	Left Joystick
→ + Start	Right Joystick
↓ + Start	Swap A-B & X-Y

retro-bit

SEGA®

# GENESIS

16-BIT VIDEO ENTERTAINMENT SYSTEM

## 8 Button Arcade Pad with USB®

For PC, Mac®, Steam®, PS3® and Switch

INSTRUCTION MANUAL  
MANUAL DE INSTRUCCIONES  
GUIDE D'UTILISATION

NA



Retro-bit is a registered trademark of Kool Brands, LLC. Sega, Sega logo, Genesis, and Sega Genesis are registered trademarks of Sega Holdings Co., Ltd. or its affiliates. Mac is a registered trademark of Apple Inc., Steam is a registered trademark of Valve Corporation. Nintendo Switch is a registered trademark of Nintendo of America Inc. USB is a registered trademark of Universal Serial Bus Implementers Forum, Inc. PS3 is a registered trademark of Sony Interactive Entertainment Inc. All other mentioned trademarks are either trademarks or registered trademarks of their respective owners. This product is officially licensed by Sega of America, Inc. This is a Retro-Bit product and is not endorsed, manufactured or distributed by Nintendo. © 2012 Kool Brands, LLC.

- Swap between D-Input and X-Input by holding the **Start + B** buttons for 5 seconds
- Compatible with PC, Mac®, Steam®, PS3® and Switch
- On Steam®, switching to X-Input may solve D-Pad issues (may differ between titles)

- Para USB®, intercambia la entrada D y la entrada X manteniendo pulsados los botones **Start + B** durante 5 segundos.
- Compatible con PC, Mac®, Steam®, PS3® y Switch
- En Steam®, cambiar la entrada X puede resolver los problemas con la cruceta.

- Pour USB®, alterner entre configuration D et X en maintenant les touches **Start + B** pendant 5 secondes.
- Compatible avec PC, Mac®, Steam®, PS3® et Switch
- Sur Steam®, changer en configuration X pourrait résoudre les problèmes de croix directionnelle.



For more information, please visit  
**[www.retro-bit.com](http://www.retro-bit.com)**